



INSTRUCTION MANUAL THE POOL COOLER

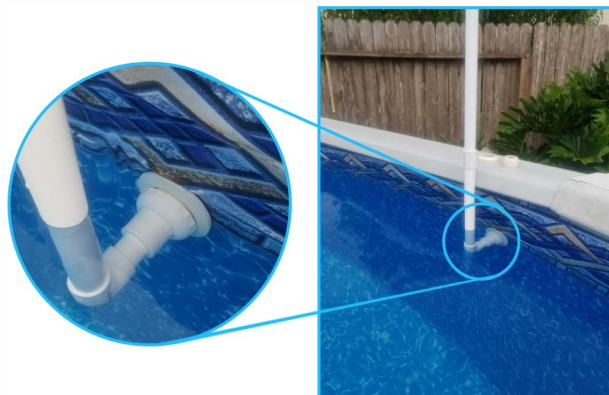

POOLCOOLER

Is summer heat making your pool too warm? Take control with your own cooling tower.

- Cools while your filtering system is running.
- No extra costs to operate.
- Directional sprayer fits your pool.
- Installs and removes in seconds.*
- Connects to either in-ground or above ground pools.
- Will not interfere with the swimming area.
- **Kids love it! Do not allow children to swing on The Pool Cooler.**

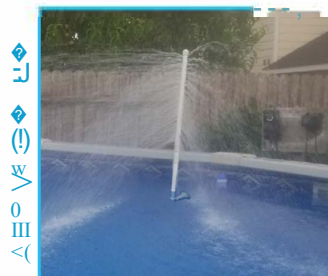

Installation Instructions

1. Remove Two fittings out of three in your pool wall fittings (1) Retaining Ring, (2) Eye Ball and Keep this (3)rd Threaded Pool Wall Fitting adapter sticking on your pool wall currently in the return outlet.



Pool Wall Adapter Assembly



(1) Retainer Ring, (2) Eye Ball



(3) Pool Wall Fitting

2. Slide in and Screw few threads of New Pool Cooler device having a header pipe in to the pool threaded adapter.

3. Position the header pipe at the opening of the adapter with the top of the header pipe pointing towards 10 o'clock. While sliding the into the pool wall adapter*, straighten the pipe to an upright position, then Tighten pool cooler Cap fully.

4. Next, insert the sprayer into the top of the header pipe with its holes positioned for the best return of the water into the pool.

Removal: While unscrewing and pulling at the bottom bend of the header pipe, move the pipe back towards the 10 o'clock position. Heavy pressure is not required! The adapter will remain in the pool return outlet for when future cooling is needed.

For best results: Cycle pools filtration system during the night hours while the air is at its coolest. install pool cooler at each end of your pool for maximized cooling.

Ask for plug (Sold Saperately) to block your other return jets to increase spray.

Have a really COOL POOL this Summer!

<https://www.youtube.com/watch?v=DpP1n5azD6k>

